




# Millwork Profiles

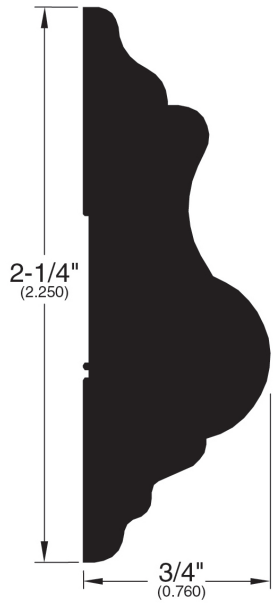


**Princeton Chair Rail (210)**

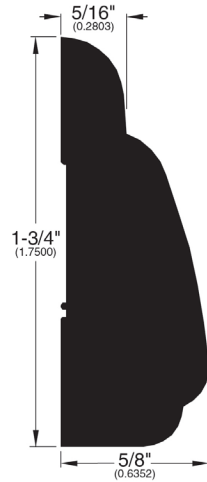


**Ranch Chair Rail (205)**

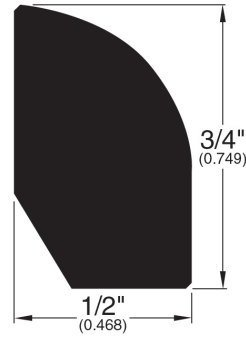



**Base Shoe (024)**

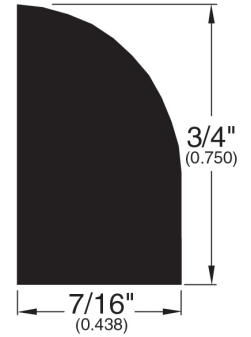

**Millwork Base Shoe (206)**

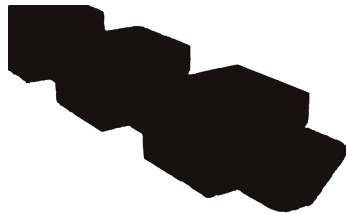


**Princeton Elite Dentil Molding (214)**  
*(For use with profile 213 only)*

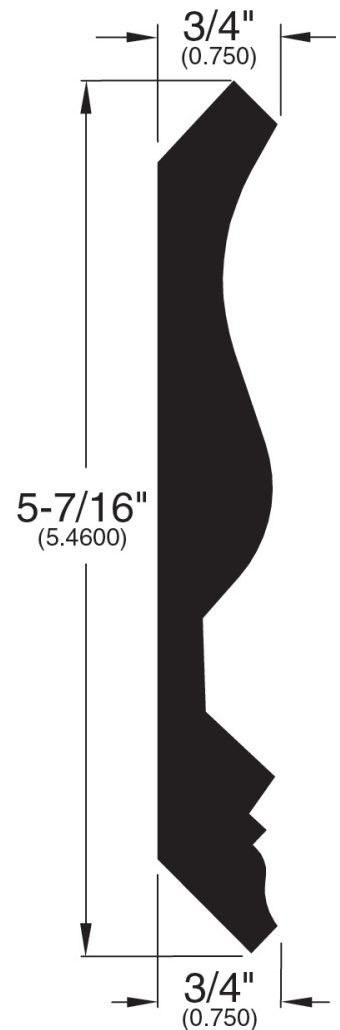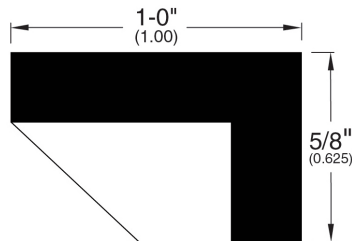


**Princeton Elite Crown Molding (213)**




# Millwork Profiles

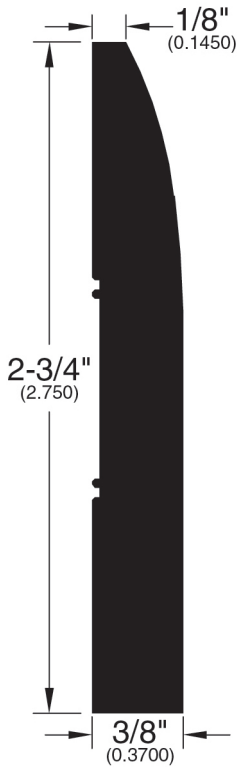


Ranch Baseboard (202)

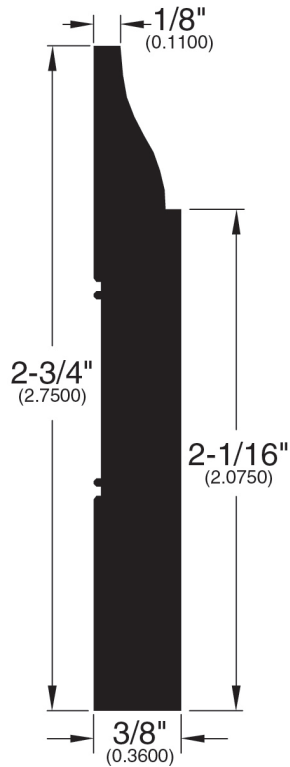


Princeton Select Baseboard (207)

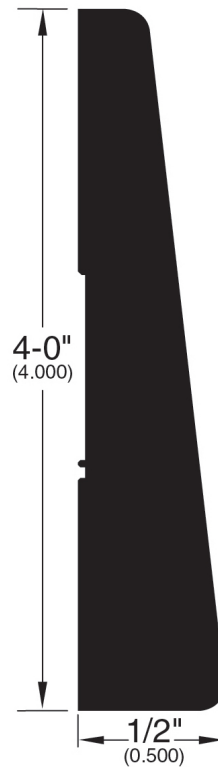


Ranch Casing (203)

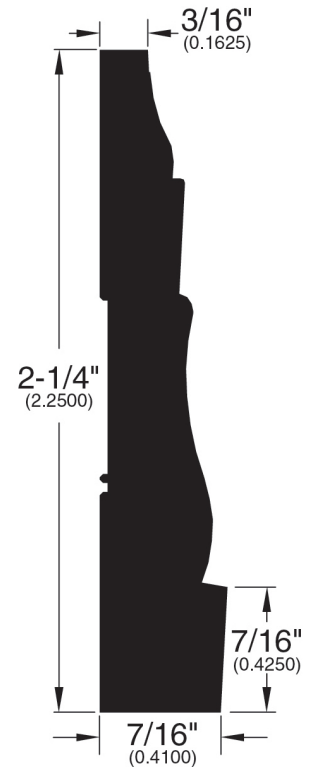


Princeton Select Casing (208)

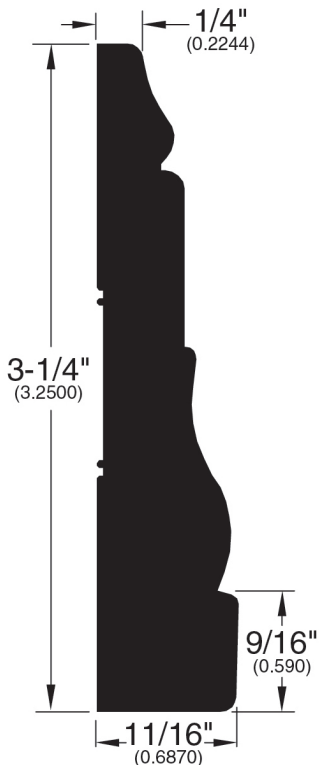


Princeton Elite Casing (212)

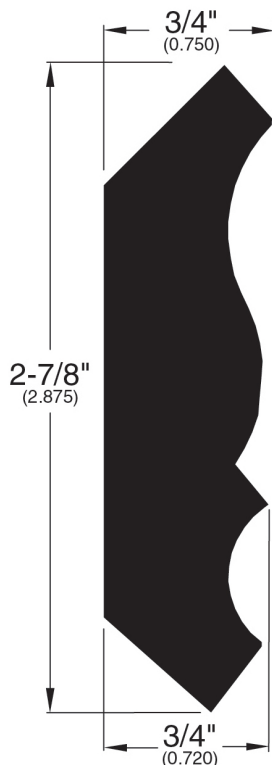

Ranch Crown Molding (204)

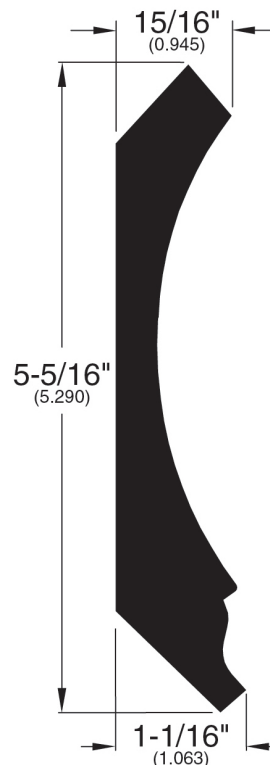

Princeton Select Crown Molding (209)

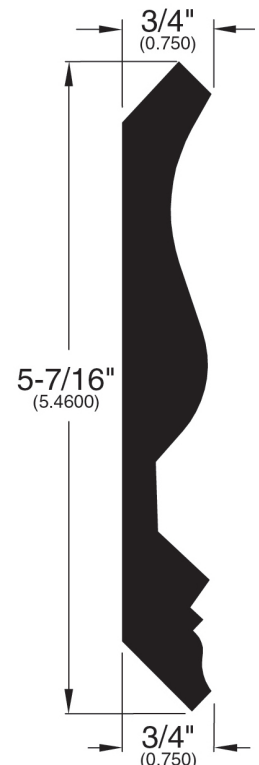

Princeton Elite Crown Molding (213)