


Wood Vent Installation Instructions


Flush Mount - Prefinished

1. Center vent and frame over duct opening in sub floor.
2. If vent and frame does not fit into duct opening, trace the vent frame with a pencil. Place masking tape on the floor around the tracing. Cut new opening into flooring, but not into the sub floor.
3. Glue and blind nail vent frame to sub floor and install the hardwood flooring.
4. When fitting vent back into the frame, if thickness needs to be adjusted, sand the vent **BACK** to level it with the floor and frame. Be sure to seal the sanded surface.

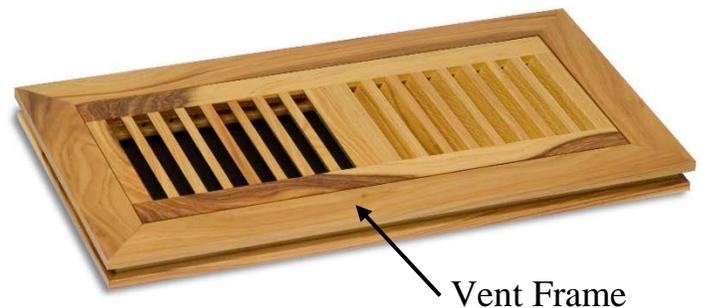


Flush Mount - Unfinished

1. Center vent and frame over duct opening in sub floor.
2. If vent/frame do not fit into duct opening, place the vent over the duct opening and trace the vent frame onto the floor. Place masking tape on the floor around the tracing. Cut new opening into flooring, but not into the sub floor.
3. Glue and blind nail vent frame to sub floor and install the hardwood flooring.
4. When fitting vent back into the frame, sand the vent frame to level it with the floor and frame. **DO NOT RUN WHEEL OF SANDER OVER THE VENT FACE!**
5. Finish (stain or varnish) all exposed surfaces (front and back) before installing.
6. Finish vent and floor separately for easy removal.

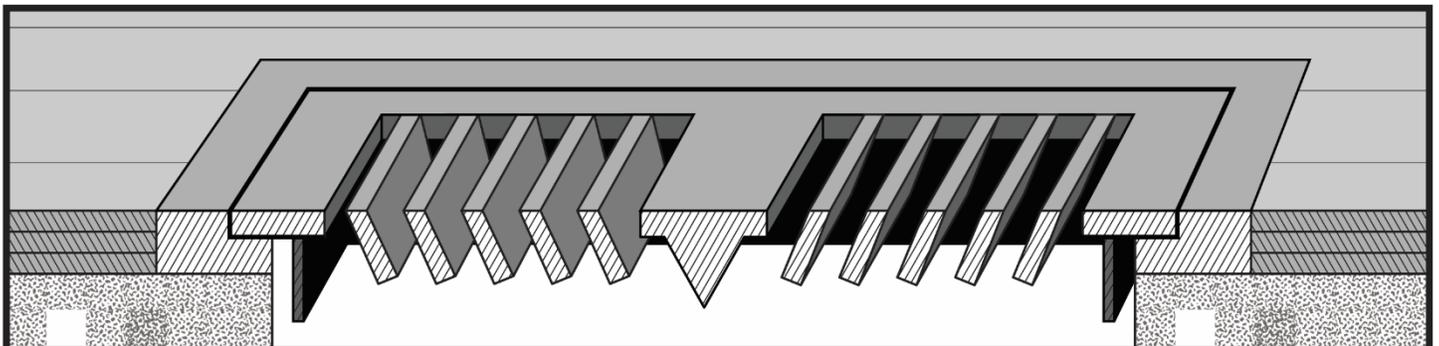

Surface Mount – Prefinished & Unfinished

1. Remove old metal register and discard. Simply drop your new vent into the existing duct opening.
2. If the vent is unfinished, stain or varnish all exposed surfaces (front and back) before installing.
3. Finish vent and floor separately for easy removal.

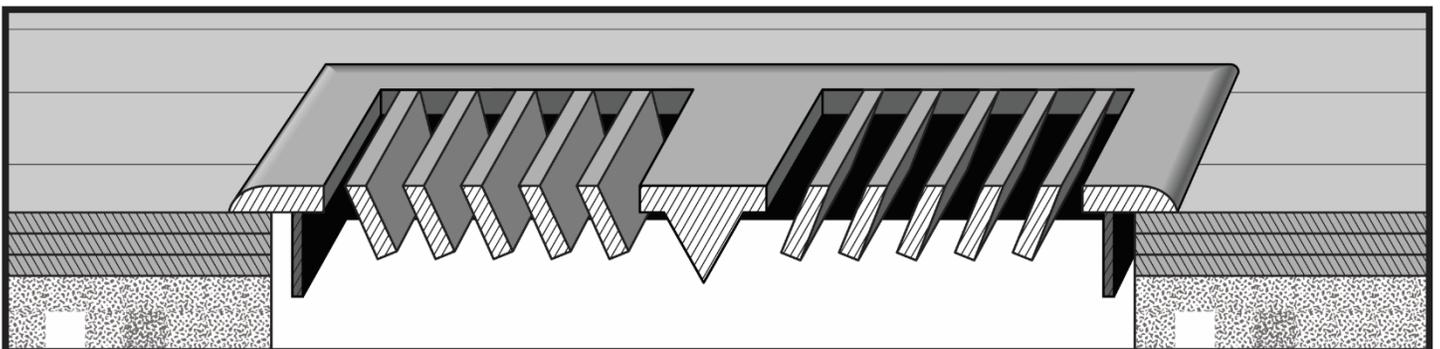

Damper Options

Box Damper



Easy Glide Damper

